


FITTING GUIDE

ELEPHANT EARS

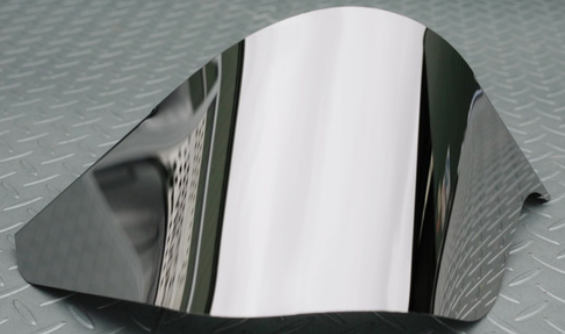

Parts Supplied with kit

- 2x stainless steel elephant ears
- 1x bolt kit

Tools and Equipment Required

- Small socket set
- Small spanner set
- Marker
- Clamps
- Drill and drill bit to suit M6 bolts



Installation Instructions

1. Identify the driver-side and passenger-side elephant ears.
2. Apply masking tape to the fitting area to avoid scratching the bonnet
3. Position the correct elephant ear on the corresponding side of the bonnet and clamp it in place. Check that the positioning and measurements are the same on both sides, then use the mounting holes in the elephant ears as a guide to mark the hole positions.
4. Open the bonnet before drilling, then drill all marked holes. This is important.
5. Remove the masking tape.
6. Fasten each elephant ear to the bonnet, ensuring the nuts are positioned inside the elephant ears. The bolts must be inserted from inside the bonnet to prevent them from causing damage when the bonnet is opened or closed. Incorrect bolt positioning may damage the bonnet when it is closed.
8. Remove the protective film from both elephant ears.

